

Clear Foot


Item No: B5002S14A-E (BLE8-CLF)

Use the clear foot for better visibility when attaching ribbons and lace, or for guiding lightweight decorative stitching.


When cover stitch threading is complete, the loose threads should initially interlock on fabric. This is most important when sewing the chain or cover stitches.

PREPARING THE MACHINE - Any stitching application can be used.


(Select one and check with instruction book for length and width setting for specific stitch selection)

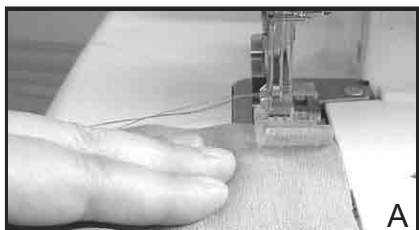

1. Cut all threads to 4 inch (10cm) in length.
2. Place fabric under the presser foot directly below the needles (fig. A).

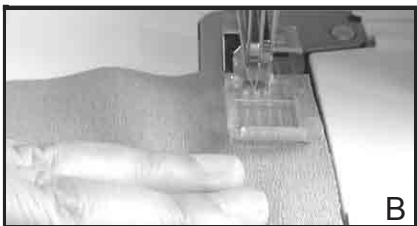

3. Lower the presser foot.
4. Turn the handwheel toward you to form 2 or 3 stitches.
5. Start to sew slowly.
6. After the first few stitches, stop and cut excess threads (fig. B).

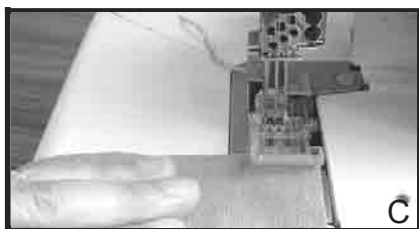

7. Start the next seam at the toe of the presser foot (fig. C).
8. You only need to raise and lower the presser foot when working with thick fabrics or when precise positioning is required.

Note: Be careful not to push or pull the fabric. The Evolve will feed it evenly without help.